

Roboty frezowania i wyrównania na całej szerokości jezdni i zatok

Kolumny 1, 2, 3, 4 oznaczają numery warstw liczone od góry.

Lokalizacja		Powierzchnia frezowania	O b j ę t o ś ć						Pole nawierzchni	Pole tworzyw (rusztów)
			frezowania	1	2	3	4	wyrównania		
km	m	m ²	m ³	m ³	m ³	m ³	m ³	m ³	m ²	m ²
0	0,00									
		37,500	1,495	3,000				1,690	75,00	
0	25,00	0,000	0,000	3,000				4,780	75,00	
0	50,00	0,000	0,000	3,000				4,690	75,00	
0	75,00	0,000	0,000	3,000				2,810	75,00	
0	100,00	0,000	0,000	3,000				2,530	75,00	
0	125,00	0,000	0,000	3,000				2,530	75,00	
0	150,00	0,000	0,000	3,400				2,450	85,00	
0	175,00	0,000	0,000	3,700				2,790	92,50	
0	200,00	0,000	0,000	3,550				2,040	88,75	
0	225,00	0,000	0,000	3,450				2,360	86,25	
0	250,00	0,000	0,000	3,200				2,810	80,00	
0	275,00	0,000	0,000	3,000				1,500	75,00	
0	300,00	0,000	0,000	3,000				1,500	75,00	
0	325,00	0,000	0,000	3,000				2,720	75,00	
0	350,00	0,000	0,000	3,000				2,910	75,00	
0	375,00	0,000	0,000	3,000				1,880	75,00	
0	400,00	0,000	0,000	3,000				1,690	75,00	
0	425,00	0,000	0,000	3,000				1,780	75,00	
0	450,00	0,000	0,000	3,000				2,060	75,00	
0	475,00	0,000	0,000	3,000				2,060	75,00	
0	500,00	0,000	0,000	3,000				3,090	75,00	
0	525,00	0,000	0,000	3,000				5,340	75,00	
0	550,00	0,000	0,000	4,000				4,810	100,00	
0	575,00	0,000	0,000	4,000				2,660	100,00	
0	600,00	0,000	0,000	3,000				1,590	75,00	
0	625,00	0,000	0,000	3,000				1,970	75,00	
0	650,00	0,000	0,000	3,000				2,530	75,00	
0	675,00	0,000	0,000	3,000				2,340	75,00	
0	700,00	0,000	0,000	3,500				2,500	87,50	
0	725,00	0,000	0,000	3,500				2,030	87,50	
0	750,00	0,000	0,000	3,000				1,590	75,00	
0	775,00	0,000	0,000	3,000				1,970	75,00	
0	800,00	0,000	0,000	3,000				2,060	75,00	
0	825,00	0,000	0,000	3,000				2,060	75,00	
0	850,00	0,000	0,000	3,000				2,340	75,00	
0	875,00	12,500	0,125	4,000				2,690	100,00	
0	900,00	12,500	0,125	4,750				2,990	118,75	
0	925,00	0,000	0,000	3,750				2,460	93,75	
0	950,00	18,750	0,375	3,000				0,840	75,00	
0	975,00	18,750	0,375	3,000				0,940	75,00	
1	0,00	0,000	0,000	3,000				1,690	75,00	
1	25,00	0,000	0,000	3,000				1,690	75,00	
1	50,00	0,000	0,000	3,000				2,060	75,00	
1	75,00	0,000	0,000	3,000				1,500	75,00	
1	100,00									

Roboty frezowania i wyrównania (c.d.)

Kolumny 1, 2, 3, 4 oznaczają numery warstw liczone od góry.

Lokalizacja		Powierzchnia frezowania	O b j ę t o ś ć						Pole nawierzchni	Pole tworzyw (rusztów)
			frezowania	1	2	3	4	wyrównania		
km	m	m ²	m ³	m ³	m ³	m ³	m ³	m ³	m ²	m ²
1	100,00									
		0,000	0,000	3,000				1,500	75,00	
1	125,00									
		0,000	0,000	3,000				2,340	75,00	
1	150,00									
		0,000	0,000	3,000				1,880	75,00	
1	175,00									
		42,000	1,690	3,360				0,740	84,00	
1	203,00									
Sumy:		142,00	4,19	153,16				111,80	3829,00	